Check Current Alarms

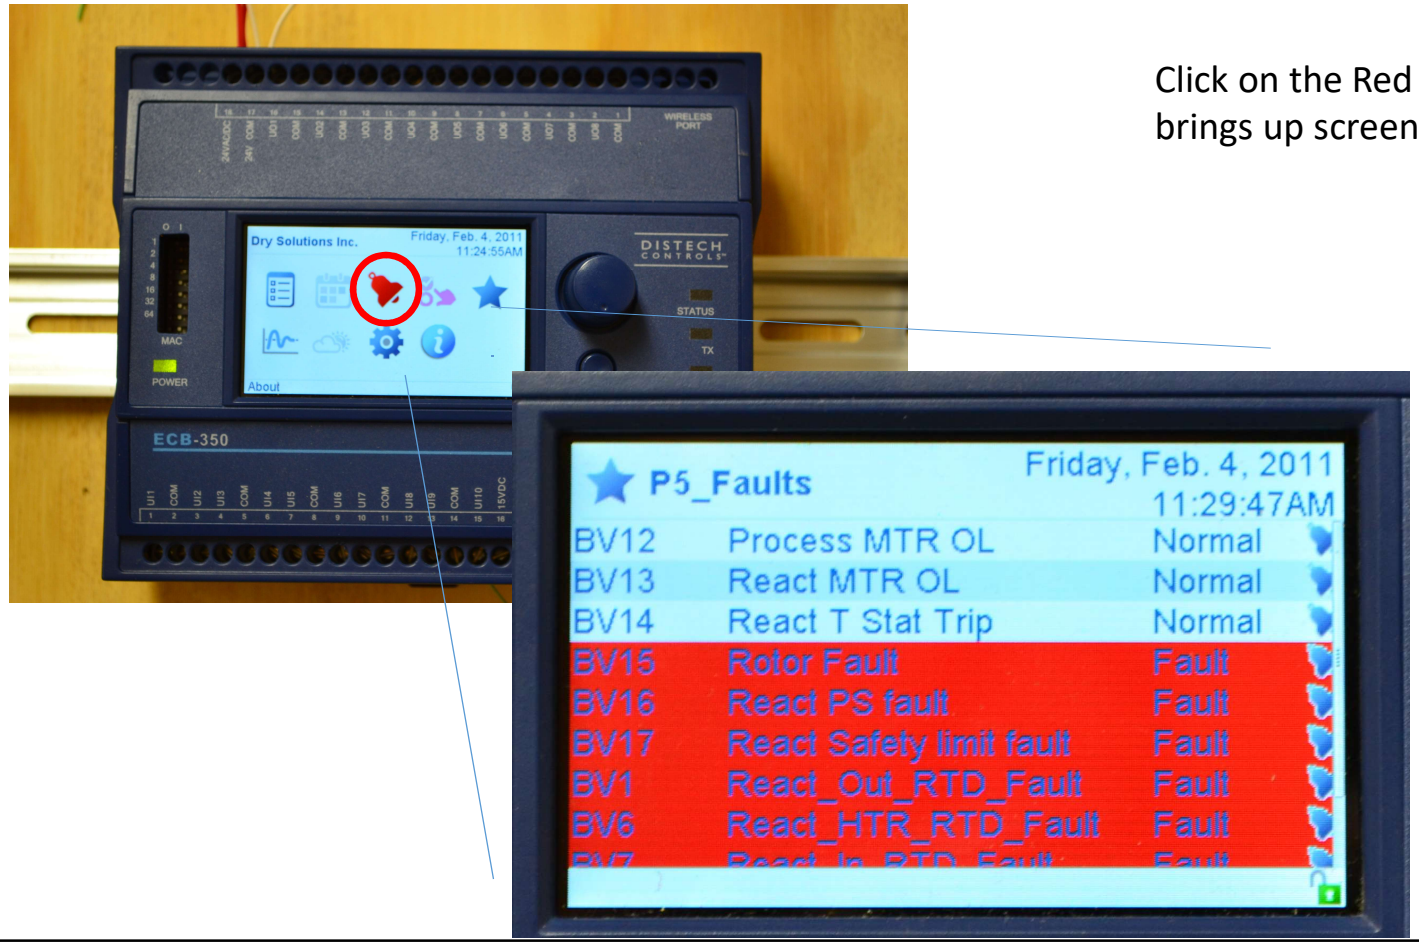

Click on the Red Bell for current alarms. This brings up screen P5_Faults.