DRYSOLUTIONS™
BECAUSE SO MUCH DEPENDS ON THE WEATHER™
Sales@DrySolutionsInc.com | 248-714-8181 | www.DrySolutionsInc.com
SALES & OPERATIONS: 3552 AVON STREET, SUITE 9, HARTLAND, MI 48353
DISTRIBUTION: 6442 PENN AVE SOUTH, MINNEAPOLIS, MN 55423

Installation of Dew Point Transmitter

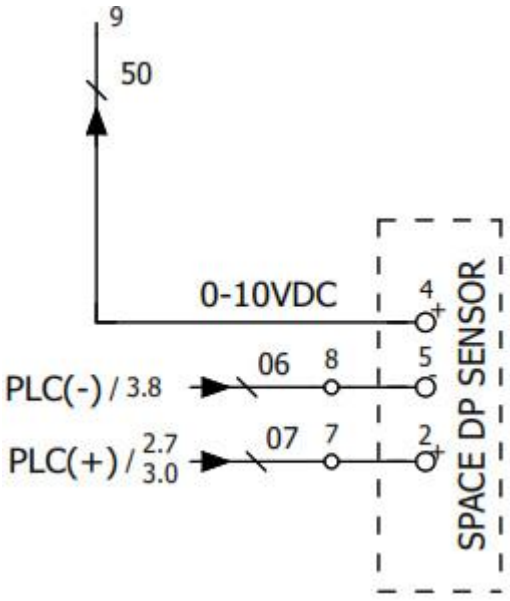

There is a terminal block on the left interior wall of the electrical cabinet. The wires from the transmitter will be landed on terminals as follows. (see diagram to the left)
Sensor terminal "2" to DS terminal "7"
Sensor terminal "5" to DS terminal "6"
Sensor terminal "4" to DS terminal "50"
*Use maximum of 18 AWG wire.

After hooking up the transmitter verify the following changes have been made to the Distech PLC.

In the "Favorites" section go to page "P1".
Click on "BV11 Run Manual/ Auto DP Control"
Click on "Override"
Click on "Auto"

In the "Favorites" section go to page "P4"
Click on "BV10 DP Enable"
Click on "Override"
Click on "Yes"

This procedure can be found in section 3.5.8 of the IOM Manual

Transmitter Dip Switch Positions.
All Dip Switches should be in the "ON" position except switches"3" and "8". These 2 switches should be in the "OFF" position.